
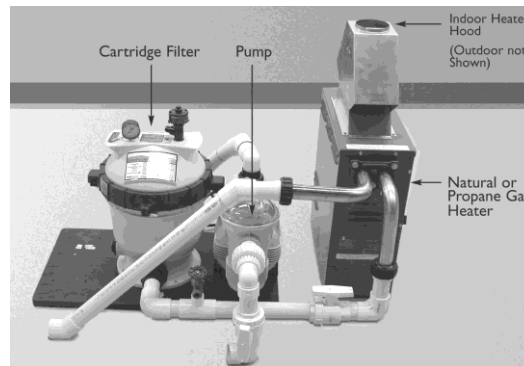


Section 1: Description

Vacuuming the pool is only required if there is dirt or debris on the floor of the pool that can't be removed by our normal sanitation, filtration, and circulation routine.

The Water Quality System pictured below is the only one that can be used to vacuum the pool. Any Water Quality System that is attached directly to the front panel of the pool cannot be used to vacuum the pool; a supplementary cleaning system must be used in that case.

The Endless Pool comes equipped with three components which will enable you to vacuum your pool: a vac head, vac hose, and telescopic pole.

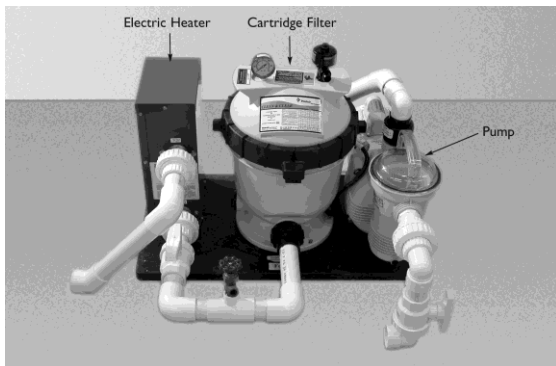

Section 2: Instructions

1. Turn your Water Quality System (WQS) on by switching the timer to the "On" position.
2. Remove the skimmer basket and weir (flapper) from the skimmer.
3. Outside of the pool, connect the vac head to both the vac hose and to the telescopic pole.
4. Submerge the vac head and hose into the pool.
5. Place the unattached end of the vac hose (the end not affixed to the vac head) against the Return line of the pool (the white circular fitting which returns the water from your WQS to the pool). This will fill the vac hose with water as it rests underwater.
6. Without lifting it out of the water, drag the same end of the hose into the skimmer opening and fit the hose into the suction port of the skimmer. Though the hose does not screw into place, it will be held in place by the suction of the WQS. You should now be drawing water from the bottom-side of the vac head in the pool.
7. Using the telescopic hose, slowly drag the vac head over the surface of the pool, picking up debris that rests on the surface of your liner.
Should you find that the suction is not strong enough from the vac head, there are ways to improve the strength of your suction. Please call our Customer Service Department should you need to do this.